

HERCULUX Chengdu HercuLux Photoelectric 恒坤光电 Technology Co.,Ltd

Product Approval

Approval number:

Customer:

Product: HK 35@21-7°3535 Lens

Material Code: 1.01.81496

PN: HK-35@21-7-3535-00-1g-1

Manufacturer: Chengdu HercuLux Photoelectric Technology Co.,Ltd



	Supplier confirmation			Client confirmation				
Proposed		DATE		Qualified□				
Project manager		DATE		Unqualified□		DATE		
Audit		DATE		Audit		DATE		
Approved		DATE		Approved		DATE		
Stamp		DATE		Stamp		DATE		

(Confirmation of acceptance by both parties must be signed and sealed)

Factory: Chengdu Shuangliu District, Iot industrial park 2 road HercuLux Photoelectric Park

Phone: 028-85887727 (801) 028-85887990 (801) Fax: 028-85887730 www.hkoptics.com
Sales Dept: Shenzhen Nanshan District Nanshan Cloud Valley Innovation Industrial Park Comprehensive Service Building,

TEL: 0755-2937 1541 FAX: 0755-2907 5140

*Approval In duplicate, for both supplier and customer.





HERCULUX 恒坤光电 Product Approval


TEL: 0755-2937 1541 Date updated: 2021/8/23 FAX: 0755-2907 5140 www.hkoptics.com

Product Picture:	
PN:	HK-35@21-7-3535-00-1g-1
Size(L*W*H/Φ*H);	Ф:35mm*H:21.5mm
Material:	РММА
Effiency:	\
Temperature(Topr):	Material extreme temperature resistance : -40℃ to +100℃ long-term use temperature : -40℃ to +80℃
FWHM:	7°
Matched LES:	XHP35-HI



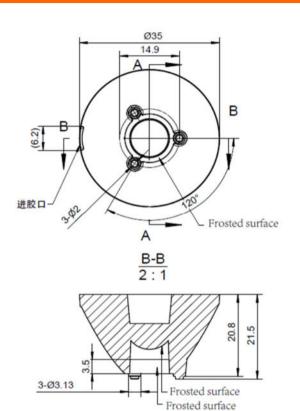

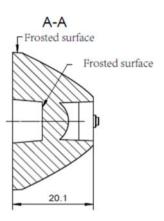

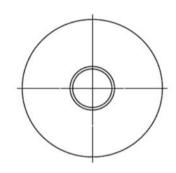


Technical remark:


- 1. The 3D map is not indicated for rounded corners and draft angle.
- 2. The dimensional tolerances are not specified according to GB/T 14486 2008 MT5.
- 3, The surface has no flash, shrinkage, bubbles and other defects.
- *4. When the lamp adopts rubber ring for waterproofing: the roughness of the contact surface between the radiator and the rubber ring is required: Ra<3.2 μ m

	Optical	design						HK-35@21-7-3535-00-1g-1				
	tructur	e desig				HK 35@	21-7°3535 Lens		1.01.81496 of drawin qty weight			
	Rev	riew				1		umber of drawi	n qty	wei	ight	
	Valid	ation				Material:	PMMA		CDHK			
^	~250	250~	~450	>4	150							

	Basic size	<3	3~10	10~24	24~65	65~140	140~250	250~450	>450	
Tolerance table (mm)	lerance valu	±0.1	±0.15	±0.2	±0.35	±0.50	±0.80	±1.2	±2.0	



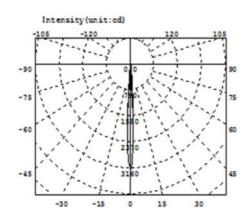

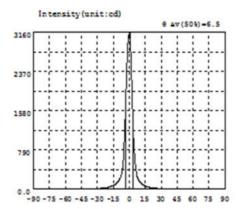

Intensity data: (deg , cd) C0-180

λ	1	λ	I	λ	1	λ	1	λ	1	λ	I
-90.0	0.1921	-58.5	1.574	-27.0	11.29	4.5	811.4	36.0	4.587	67.5	1.048
-88.5	0.2481	-57.0	1.704	-25.5	13.60	6.0	433.3	37.5	4.045	69.0	0.9470
-87.0	0.2936	-55.5	1.819	-24.0	16.45	7.5	241.6	39.0	3.617	70.5	0.8995
-85.5	0.3605	-54.0	1.938	-22.5	20.41	9.0	172.5	40.5	3.262	72.0	0.8171
-84.0	0.3739	-52.5	2.096	-21.0	25.67	10.5	128.0	42.0	2.941	73.5	0.7487
-82.5	0.4298	-51.0	2.209	-19.5	32.87	12.0	96.39	43.5	2.685	75.0	0.7270
-81.0	0.4658	-49.5	2.323	-18.0	42.45	13.5	73.45	45.0	2.515	76.5	0.6553
-79.5	0.5429	-48.0	2.452	-16.5	54.51	15.0	57.53	46.5	2.330	78.0	0.5911
-78.0	0.6002	-46.5	2.602	-15.0	69.44	16.5	45.78	48.0	2.156	79.5	0.5570
-76.5	0.6463	-45.0	2.783	-13.5	88.30	18.0	35.38	49.5	2.034	81.0	0.5004
-75.0	0.7118	-43.5	3.026	-12.0	114.5	19.5	27.32	51.0	1.908	82.5	0.4437
-73.5	0.7579	-42.0	3.292	-10.5	151.4	21.0	21.54	52.5	1.812	84.0	0.3786
-72.0	0.7816	-40.5	3.618	-9.0	203.0	22.5	17.31	54.0	1.754	85.5	0.3390
-70.5	0.8438	-39.0	4.034	-7.5	284.0	24.0	14.23	55.5	1.646	87.0	0.2750
-69.0	0.9312	-37.5	4.541	-6.0	494.3	25.5	11.96	57.0	1.568	88.5	0.2260
-67.5	1.001	-36.0	5.065	-4.5	1053	27.0	9.995	58.5	1.446	90.0	0.2351
-66.0	1.122	-34.5	5.584	-3.0	1975	28.5	8.546	60.0	1.381		
-64.5	1.211	-33.0	6.241	-1.5	2895	30.0	7.400	61.5	1.282		
-63.0	1.260	-31.5	7.088	0.0	3157	31.5	6.537	63.0	1.194		
-61.5	1.349	-30.0	8.163	1.5	2682	33.0	5.948	64.5	1.137		
-60.0	1.460	-28.5	9.544	3.0	1590	34.5	5.304	66.0	1.096		

Electricity Parameter:

Current I: 0.1000A Power: 3.500W Voltage V: 35.00V PF: 1.000

Optical Parameter (Distance=2.410m):

Equivalent Luminous flux: Φ eff= 94.21lm Efficiency: Eff=26.92lm/W

Diffuse angle: @(25%): 9.5deg @(50%): 6.5deg @(75%): 4.3deg @(50%): 6.5deg

Diffuse angle: @(25%): 9.5deg @(50%): 6.5deg @(75%): 4.3deg @(50%): 6.5deg

Imax=3157cd (C=0.0deg,G=0.0deg)

CO-180Plane Imax= 3157cd (G=0.0deg)

C0-180Plane I0= 3157cd



	Standard size	Upper Size limit	Lower size limit	Test result1	Test result2	Test result3	Test result4	Jud gme nt	Remarks		
	diameter	35		35. 09	35. 06	35. 09	35. 09		environment: In 20 °C -25		
	height	20.8		20. 9	20. 89	20. 89	20. 9		°C environment to achieve		
	column diameter	2		1. 98	1. 97	1. 96	1. 95		thermal equilibrium after the test.		
		Gate shear can not affect the appearance of the lamp									
		See atta	chment "A	ppearance	Inspection	Standards"					
ance	See attachment "Appearance	E	1	No burr	No burr	No burr	No bu	rr	ОК		
Quality			N	o stains	No stains	No stains	No stai	ns	OK		
ıl		PMMA	4		Color	Tra	nsparent		OK		
Testing L	_ED			Х	HP35-HI	•			•		
comparable to the source of the test, if it is required to be out of range. According to the heat capability of the lamp and the actual conditions of the use environment, the lens should be fully						neat d	issipation				
					1			_			
				-							
-				79. 97%	79. 76%	81. 17%	81. 20%				
	See the signat	ure sample		`							
hensive ment				Qualified							
Remarks: 1. Tool Number: V-Vernier Caliper 2D-Quadratic H- Height Gauge M-Tool Microscope P-Needle T- Thick Gauge R-Radius Gauge E-Visual. 2. Ambient temperature on the size of the product refer to the table on the right Length changes (mm) 0.8 0.6 0.4 0.2				MA produ	ta	ble 40	Siz 50 -■ Siz 10 - ■ Siz 15	ee: mm ee: 0mm ee: 0mm			
	Testing L The re compar capabilit FWHM angle K-val Efficie Facula Phensive ment : Number: V D-Quadrat auge M-To pe P-Need uge R-Rac -Visual. ient tempe of the prod	diameter height column diameter sance See attachment "Appearance Inspection Standards" II Testing LED The recommended six comparable to the sou capability of the lamp a FWHM angle K-value Efficiency Facula See the signate chensive ment : Number: V-Vernier D-Quadratic H- auge M-Tool pe P-Needle T- uge R-Radius -Visual. ient temperature on of the product refer	size Size limit diameter 35 height 20.8 column diameter 2 Gate shees See attachment "Appearance Inspection Standards" Testing LED PMM/ Testing LED PMM/ Testing LED PMM/ Testing LED Facula See the signature sample shensive ment Pauge M-Tool pe P-Needle Tuge R-Radius-Visual. ient temperature on of the product refer	size Size limit size limit	size Size limit result1	size Size limit result1 result2	size Size Imit result1 result2 result3	size Size limit size limit result1 result2 result3 result4	Size Size limit size limit result1 result2 result3 result4 res		

Precautions:

- 1、Wear clean gloves during lens assembly to prevent contamination of the lens surface.
- 2. Take the lens try to avoid touching the total reflection surface.
- 3. When the lens surface contamination, you can only gently wipe with soft cotton sticky neat neutral solvent, not allowed to wipe with industrial solvents.
- 4. The working temperature of the lens should be within the temperature limit of the lens material. Exceeding the temperature limit will cause damage to the lens and affect the service life of the lens.




Р	N	HK-35@21-7-3535-00	-1g-1	Product Name	HK 35@21-7°	3535 Le	ens
Product	material	PMMA		Customer			
Package diagram		Single Vacuu	ım package	Box pack	age	>	
Product	packing	18	A/ Box	4	PCS/Layer		
	paoig	13	Layer/Box	936	A/ Carton		
	NO.	Part No	Part name	Size	Dosage	Unit	Remarks
	1	2.07.0042	Blister box	23cm*21cm	52	BAG	
Da alva siis	2	2.08.0001	PE film	30cm*30cm	52	PCS	
Packagin g	3	2.06.0005	Reel label paper	6.2cm*8cm	52	PCS	
Materials	4	2.06.0005	Box label paper	6.2cm*9.2cm	1	PCS	
	5	2.06.0003	big plate	46.8cm*42.8cm	14	PCS	
	6	2.06.0001	big carton	46.8cm*42.8cm*36c m	1	PCS	
Remarks		packing is not subject to this sp 4 bags for each layer and 5 bag			shall prevail(The	re are th	nree



Special notice

When gule pass through holes, columns and other structures, or part of the thin structure, will form a weld line. The product which uses multi-point injection welding line will appear because of the combination of sol, as shown below:

Syntneti

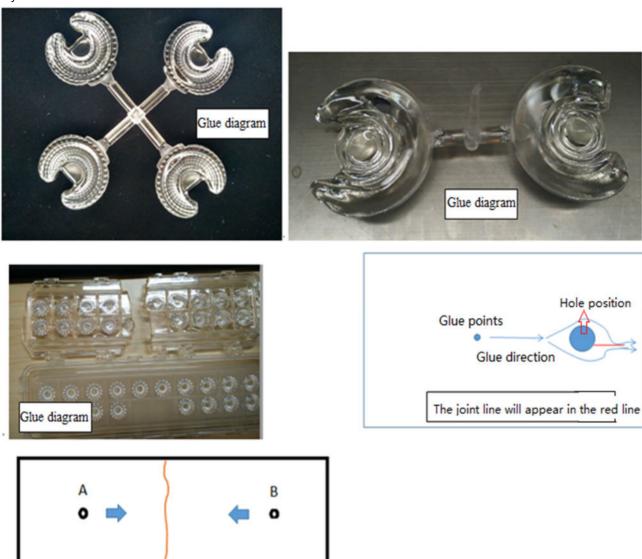

Please note:

The appearance of lines in the structure of the product as well as at the screw hole is a normal phenomenon, will not affect the actual use of the product, and can not be avoided at this stage.

The joint line will appear in the red line



Appearance inspection standards

1 Operating procedures

1.1.1Sampling standards, sampling plan and AQL

Test level : GB/T2828.1-2012The first part is according to the acceptance quality limit (AQL) retrieval batch inspection sampling plan, general inspection level Π level, CR class defect coefficient 0, MA defect rejection level AQL = 0.65, MI class defect rejection level AQL = 1.0; defect level please see 5.4.

2 Code table

Code	Code	Unit	Code	Code	Unit
	description			description	
N	Amount/pcs	pcs	D	Diameter	mm
L	Length	mm	Ħ	Depth	mm
W	Width	mm	DS	Distance	mm
S	Proportion	mm²	SS	Offset	mm

3 Test conditions

- 3.1 Sight distance and working hours: Sight distance should be 30-35cm, each side of the inspection time does not exceed 12s, the visual angle of 45-135 degrees;
- 3.2 Light: 2x40w cool white fluorescent lamp, the light source is 500-550mm away from the lens surface; in order to make the appearance defect can be correctly recognized, the illumination should be 500-1000Lux, and the observation time is 10 seconds.
 - 3.3 Visual inspection staff should be 1.0 (including corrected visual acuity) above, no color blindness, color weakness.

4 Appearance inspection standards

Test items	ludging standard	Inspection equipment	Defect level			
rescitents	Judging standard	Testing method	MI	MA	CR	
	When start the machine and process, all products have to check the appearance of the sample, the appearance of the sample is divided into qualified samples and limited samples.					
Check the sample	1: Qualified sample refers to the appearance and structure standard of the product which recognized by the client, the sample size should be confirmed before mass production;	Sample comparison , visual			√	

1		1	Ī	1	
	2: The limited sample refers to the limit of a particular exceptionally developed sample. Limit the sample only for its specific point of exception to confirm; The priority is higher than the other criteria in this table. When there is a limited sample, the limit sample shall prevail.				
Raw edge	Not allowed to affect the size and assembly	Visual, point card		√	
Scratch	1: Non-optical surface and non-exposed surface scratches should be visually insignificant and the length is less than 1/10 of the maximum surface size.	Visual, point card, calipers		√	
Fingerprint	Fingerprints are not allowed on all products	Visual		√	
Foreign objects, black spots, white spots	The product may not be attached to foreign objects, including oil, fiber, dregs of water gap and so on				√
Deformation	Insufficient filling shall not affect the appearance of the assembly and the exposed surfaces.	Visual, feeler			√
Poor ejection	Products may not appear bad ejection, including no convex top, thimble printed on the assembly surface shall not be higher than the product surface, non-assembled surface thimble height should not exceed the product size tolerances; thimble printing should be less than the product surface and no more than 0.3; thimble surface treatment should be consistent with the product side. Ejection strain: the optical surface and the appearance of the exposed surface after assembly are not allowed to have a strain, and the structural surface does not allow visual obvious strain.	Visual, point card		√	
Insufficient filling	Insufficient filling shall not affect the appearance of the assembly and the exposed surfaces, The signature sample shall prevail.	Visual, point card		√	
Shrink	When the entire surface of the product shrinks, the optical properties and dimensions must meet the requirements, and the visual will not significantly affect the appearance.Part shrink reference point defects	Visual, point card		√	
Flow marks、Welding line	 1: Product does not allow the presence of flow marks and welding lines unless the structure can not be avoided; 2: The remaining flow marks shall not appear in the optical surface, a single L ≤ 10mm, no more than two 	Visual		٧	

Bubble	No bubbles are allowed	Visual		√	
Foreign objects, black spots, white spots	Not obvious or D ≤ 0.3mm black spots and foreign bodies in the area of 100x100mm not more than 1; Exceeded foreign matter black spots is judged bad.	Visual, point card	√		
Damaged	No damage is allowed	Visual			√
Cold glue	Optical surface may not have cold glue, non- optical surface cold glue should meet the visual is not obvious.	Visual	√		
	1: Do not affect the product size, shall not penetrate the optical surface, the cut should be smooth;				
Bad incision	2: Laser cutting products, the optical surface burns shall not occur after the processing is completed. Beading must not affect product installation	Visual			√
	3: Three molds and hot runner gate shall not appear residue.				
Scrub	Scrub surface should be uniform, off the scrub phenomenon should not be obvious , A single off scrub imprint requires D \leq 1 mm and no more than 1 area within a 50x50 mm area	Visual		√	